
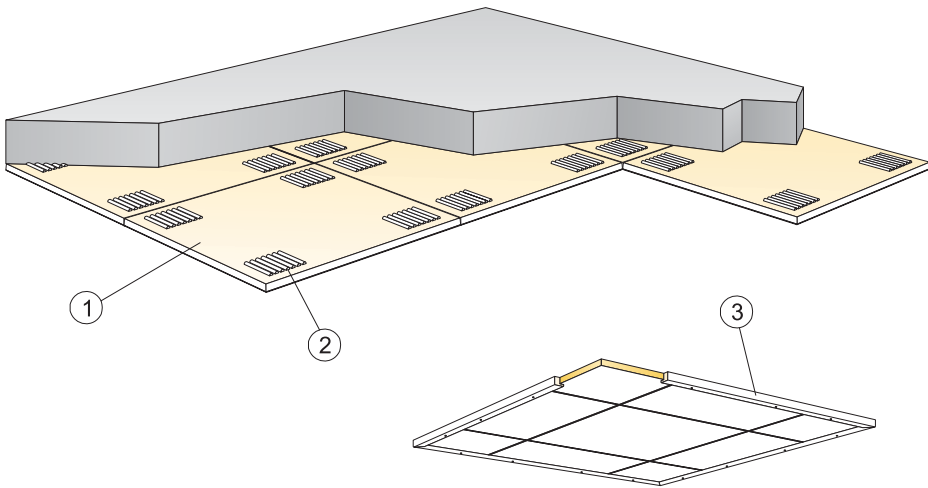


## Ecophon Focus B

600x600

M03

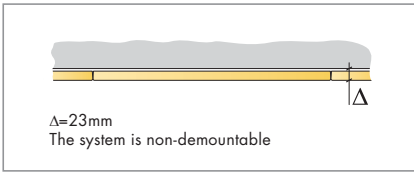



1. Ecophon Focus B

2. Connect Absorber glue



3. Connect Wood trim

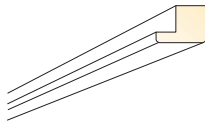




Connect Absorber glue



**x1**





**x1**

**Ecophon**<sup>®</sup>  
SAINT-GOBAIN

A SOUND EFFECT ON PEOPLE

[www.ecophon.com](http://www.ecophon.com)


1

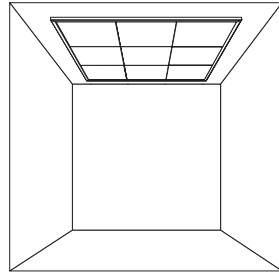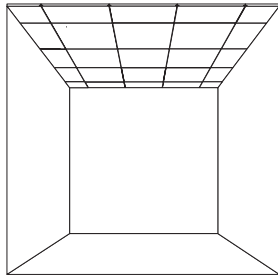





2




10



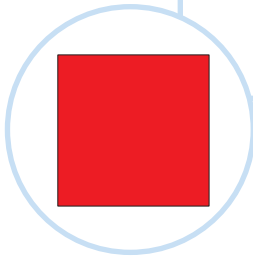


2

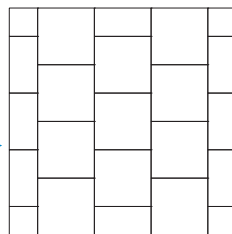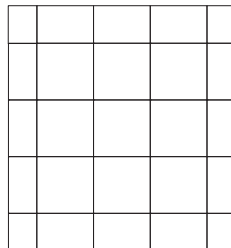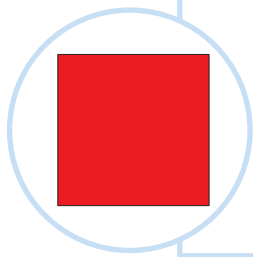
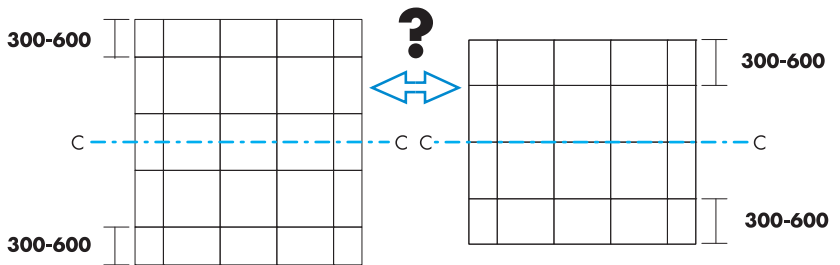



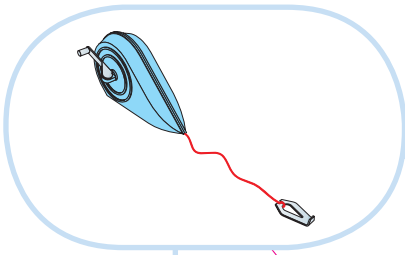


**3**


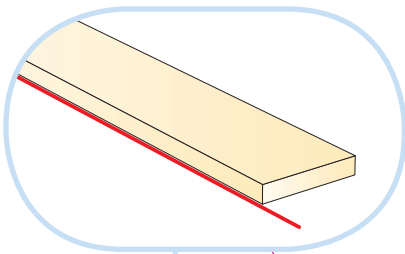
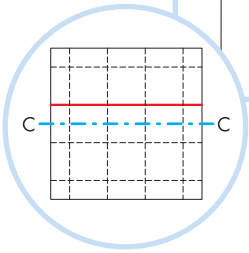
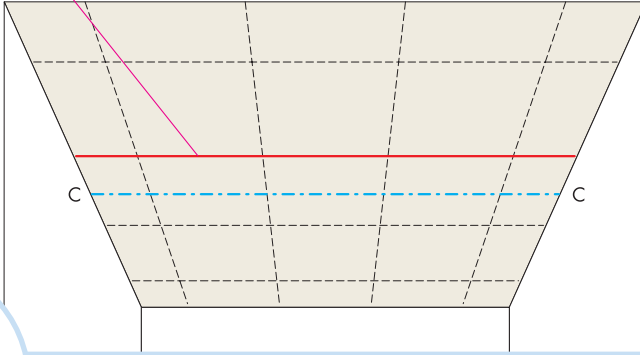


**4**



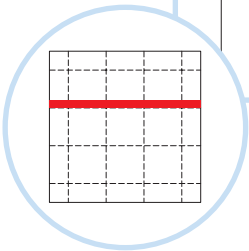
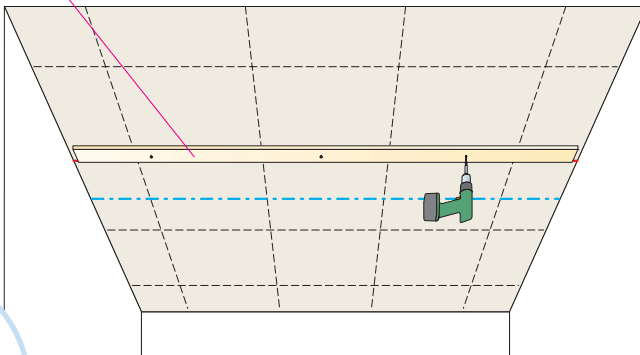


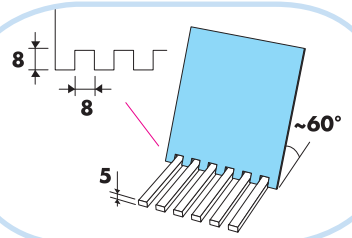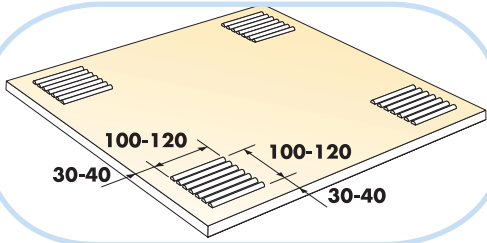


5

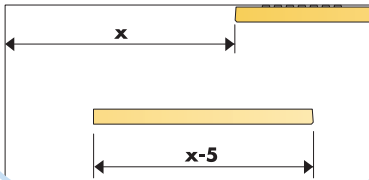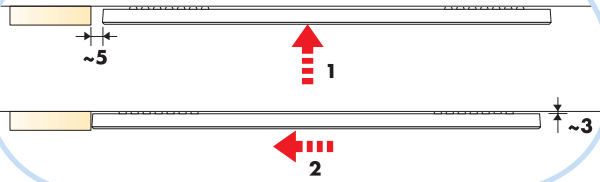
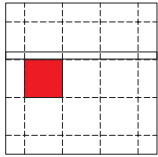
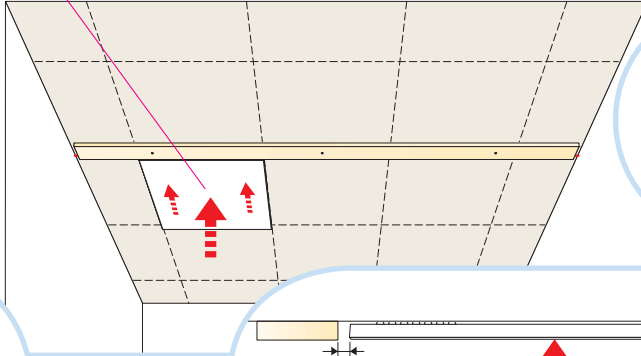


6

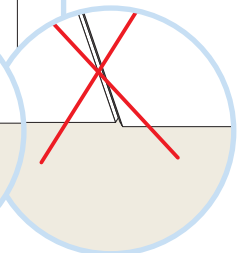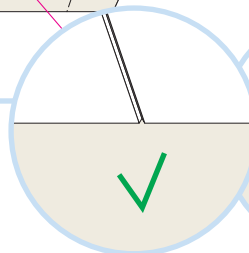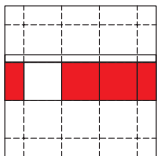
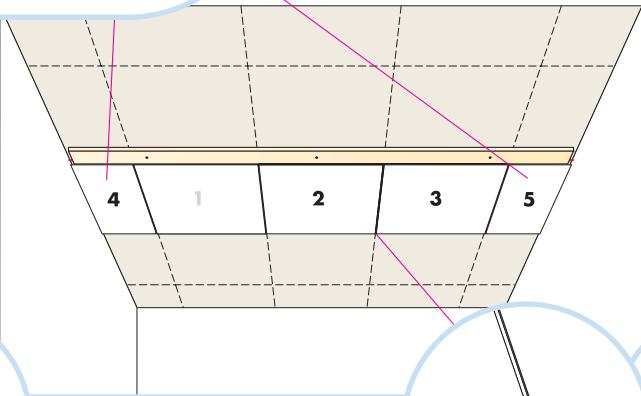




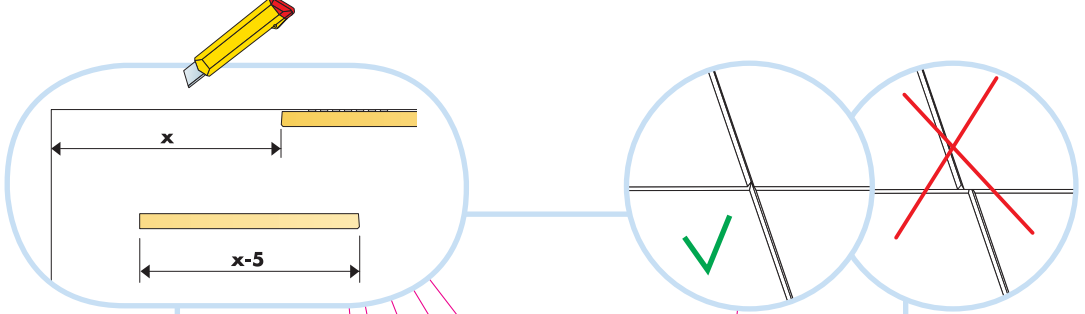


7


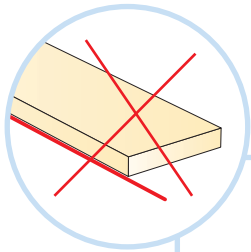
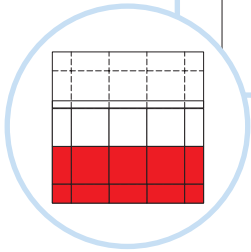
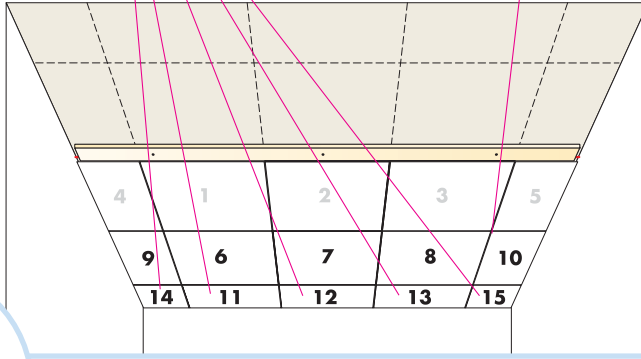



8

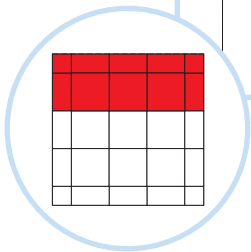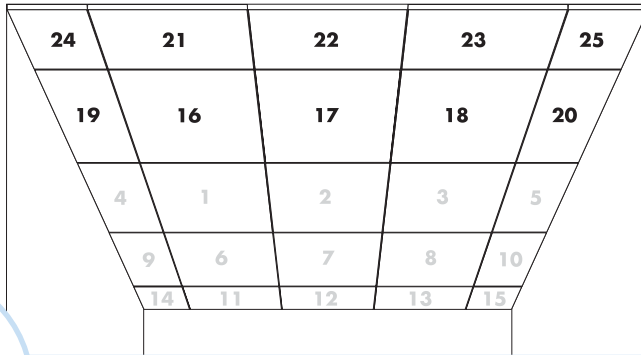


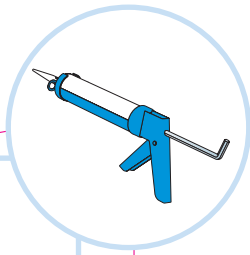
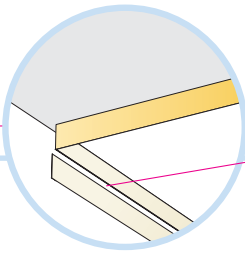
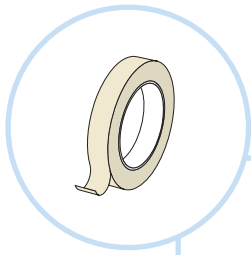


9

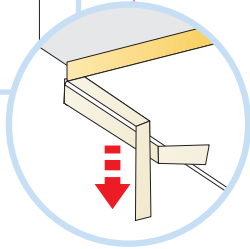
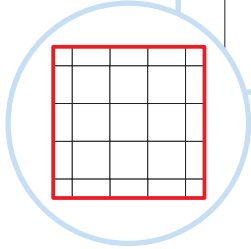
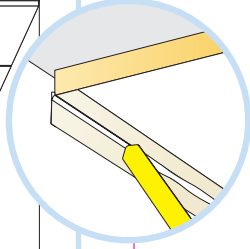
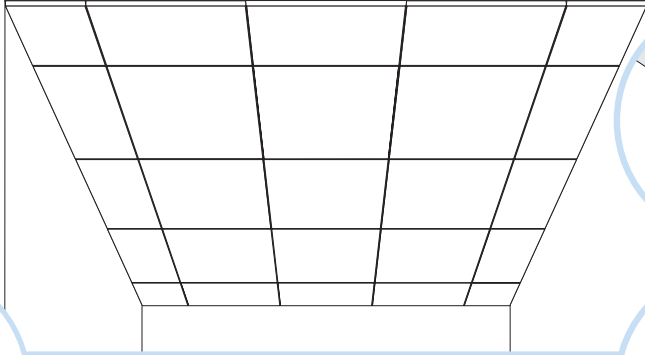


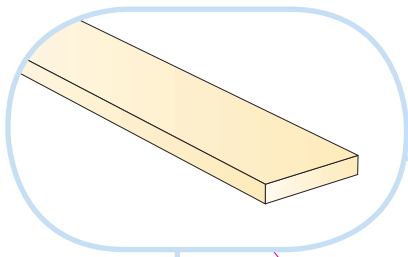

10



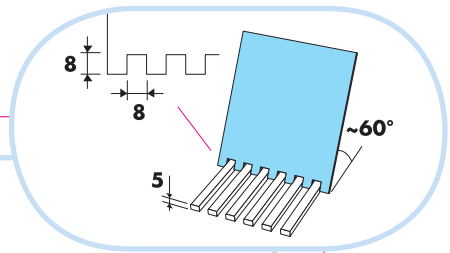
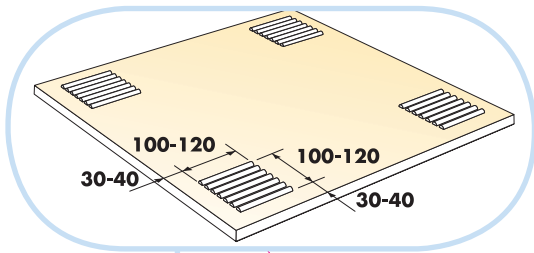
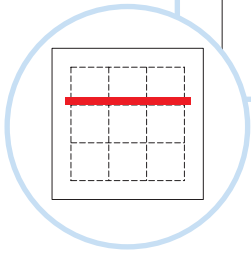
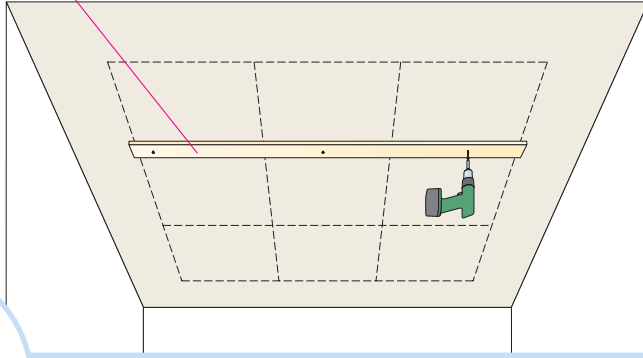


11

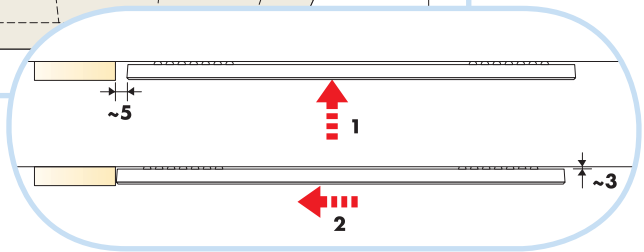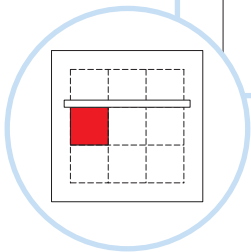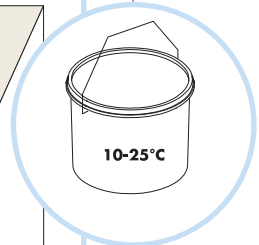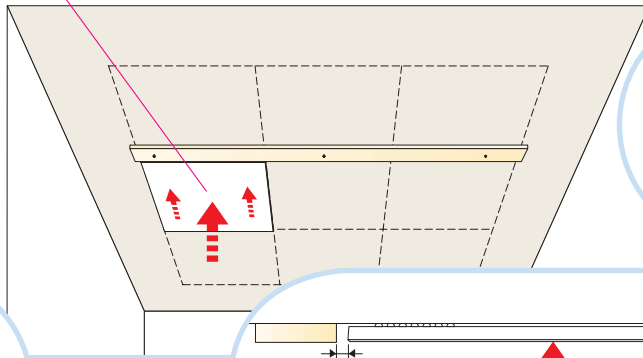



12

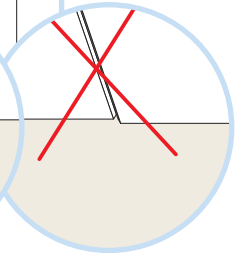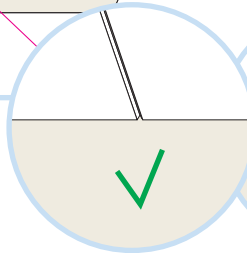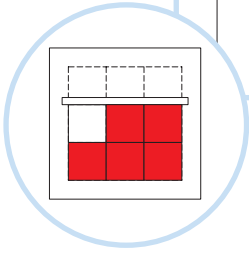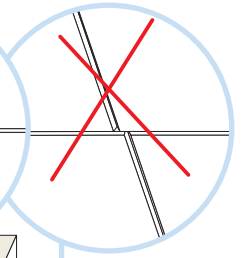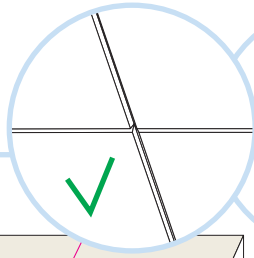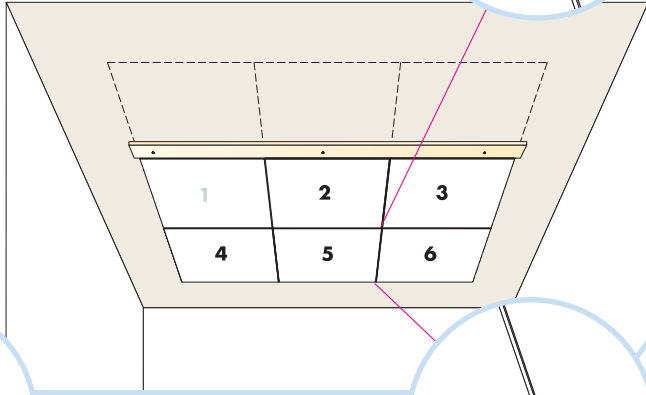

13

